

INS Coordinates for Aircraft Stands (GND East)					
Stand No.	Coordinates	Stand No.	Coordinates	Stand No.	Coordinates
B21	315943.56001N 0345353.03249E	J1	315951.63020N 0345332.27287E	V1A	320006.84779N 0345350.41229E
B22	315941.82852N 0345354.05577E	J2	315949.11943N 0345330.71601E	V2	320008.10618N 0345350.89134E
B23	315940.06727N 0345354.98694E	J3	315946.69871N 0345330.39888E	V2A	320007.92697N 0345350.82366E
B24	315938.34327N 0345356.01932E	J4	315944.22647N 0345329.46555E	V3	320009.30636N 0345351.35473E
B25	315936.61732N 0345357.05283E	J5	315941.91473N 0345328.57740E	V3A	320009.00953N 0345351.23380E
B26	315934.89721N 0345358.08289E	J6	315939.67793N 0345327.40977E	V4	320009.87116N 0345351.58719E
B27	315933.31292N 0345359.03134E	J7	315937.33695N 0345326.51565E	V5	TBD
B28	315931.86544N 0345359.89858E	J8	315935.35200N 0345321.12823E	V5A	320010.75587N 0345351.89757E
B33	N/A	J9	315938.28467N 0345317.90871E	V6	320011.70404N 0345352.25947E
B34	N/A	J10	315940.38192N 0345319.21923E	V6A	320011.82930N 0345352.30615E
B35	315936.87772N 0345404.64880E	J11	315945.57447N 0345320.56755E	V7	320012.90536N 0345352.71472E
B36	315939.77097N 0345403.41644E	J12	315947.62054N 0345321.53504E	V7A	320012.90536N 0345352.71472E
B37	315941.97744N 0345402.25794E	J13	315950.64708N 0345322.38185E	V8A	320013.98296N 0345353.12748E
B38	315943.37744N 0345400.81217E	L1	315949.93865N 0345333.27710E	k	315936.05963N 0345334.10157E
B39	315944.73547N 0345400.00692E	L2	315947.61491N 0345332.39390E	K	315937.93281N 0345335.40265E
B43	315945.89017N 0345346.52524E	L3	315944.27033N 0345331.45437E	K	315932.09668N 0345334.25135E
B44	315945.48370N 0345345.31858E	L4	315942.26144N 0345330.67984E		
B45	315945.39609N 0345344.00420E	L5	315940.41274N 0345329.96230E		
B46	315945.30881N 0345342.69019E	L6	315938.56179N 0345329.25355E		
B47	315945.22053N 0345341.36857E	V1	320006.91015N 0345350.43803E		

Notes:

Aircraft with a wingspan of up to 30 meters length 40 meters (B737-800) on B28;

Aircraft entry to positions V1 through V8 including by towing only. Exit by push-back to start up position on apron V (coordinates 32013.61N 0345348.66E) and taxi out.

Positions B43 through B47 incl. for aircraft up to ATR-72 size.

Taxi in and out via taxiway 'K' and L.

Start-up coordinates - 315947.36N 0345342.97E.