


FOR START UP AND TAXI INSTRUCTIONS CALL OVDA TWR.

ELEVATIONS ARE IN FEET
DIMENSIONS ARE IN METRES
BEARINGS ARE MAGNETIC


PILOTS SHOULD STRICTLY ADHERE
TO MARSHALLER'S INSTRUCTIONS.
TAXI GUIDANCE INSTRUCTIONS MAY
DEVIATE FROM PAINTED LINES
ACCORDING TO AIRCRAFT TYPE.

LEGEND	
1A	FOR AIRCRAFT UP TO B-767-300 SIZE
1-4	FOR AIRCRAFT UP TO B-767-200 SIZE

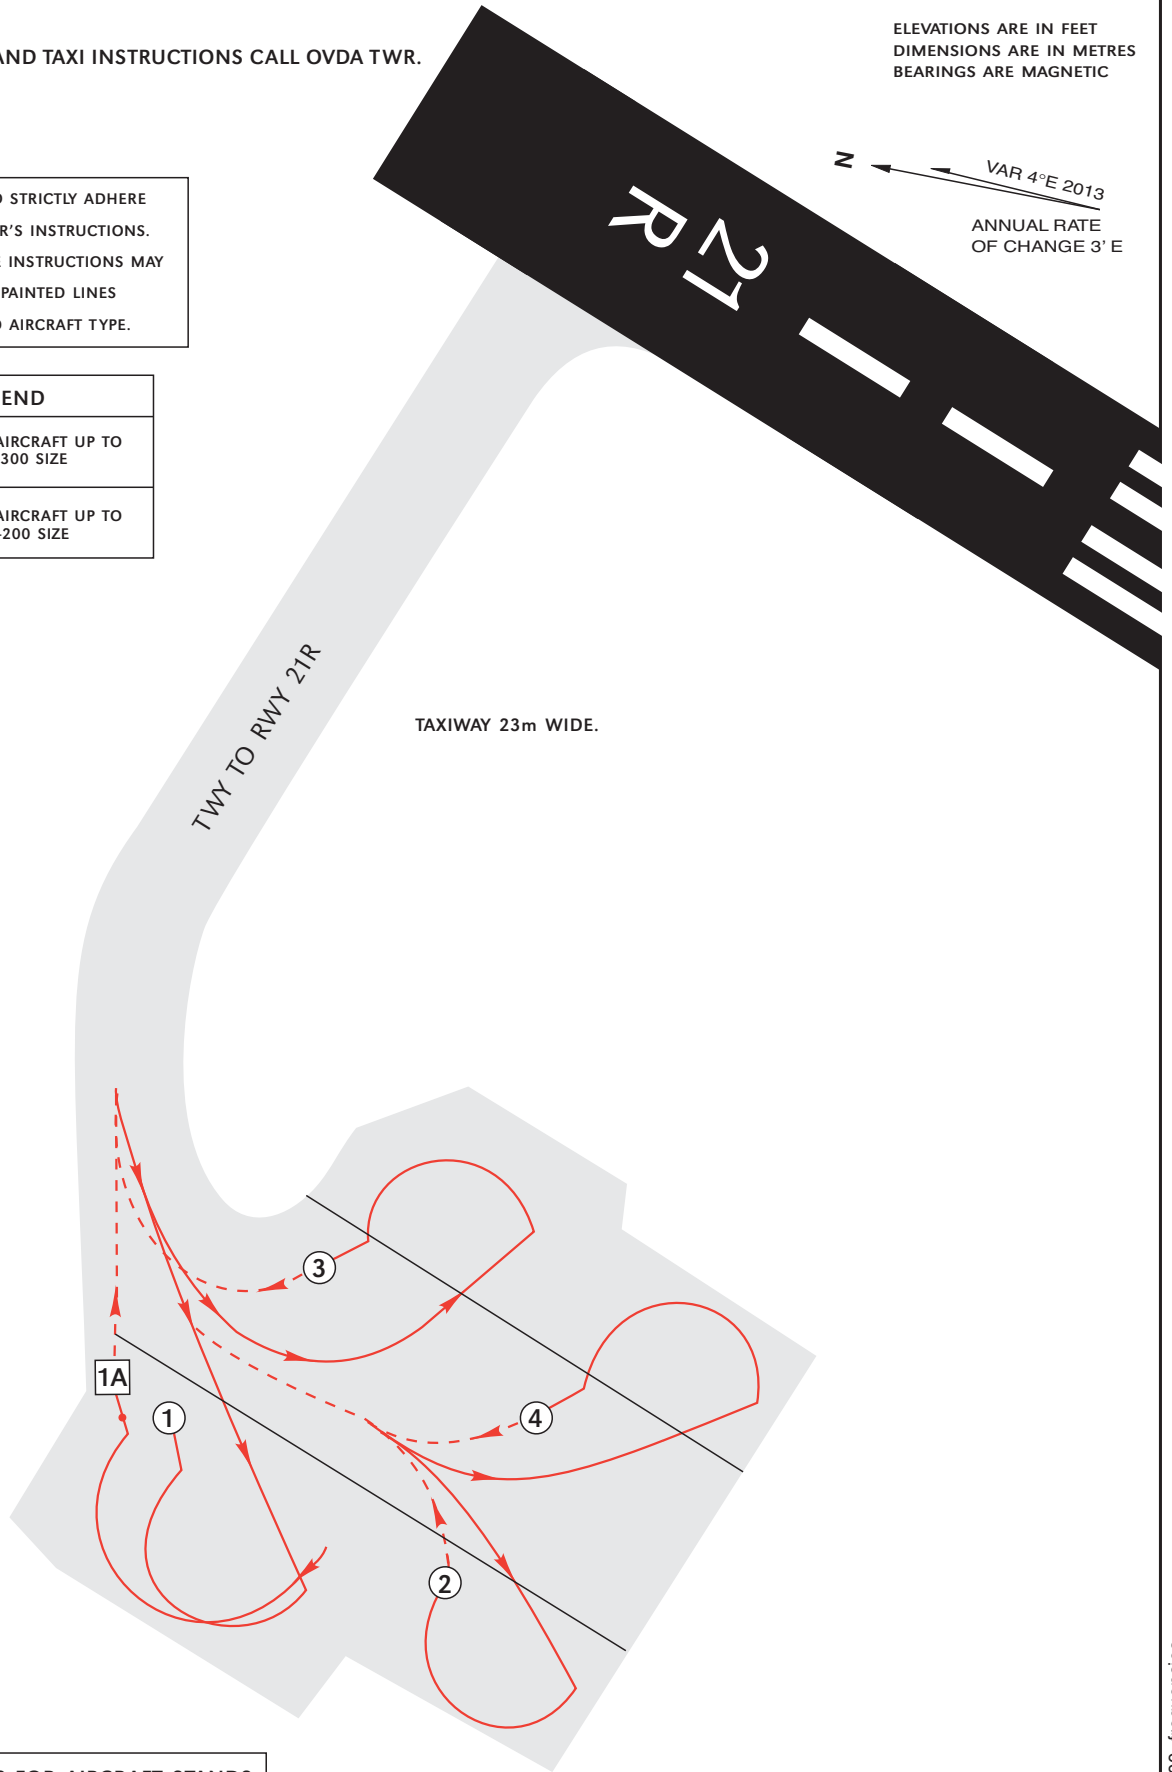

INS COORDINATES FOR AIRCRAFT STANDS

1	29° 57' 07.94" N	034° 56' 07.83" E
1A	29° 57' 07.95" N	034° 56' 07.33" E
2	29° 57' 05.42" N	034° 56' 07.20" E
3	29° 57' 06.52" N	034° 56' 10.16" E
4	29° 57' 04.76" N	034° 56' 08.97" E

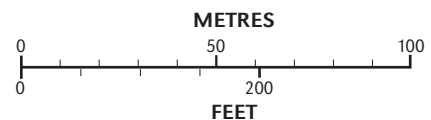

CHANGES: Note 747-400, frequencies